



Fitting the Blinds

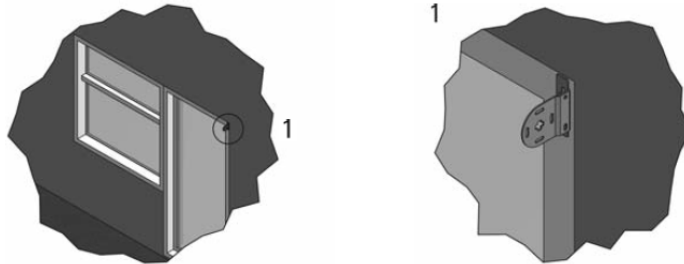

- 1) Starting at the right hand side, place and secure a control end bracket at the measurement taken

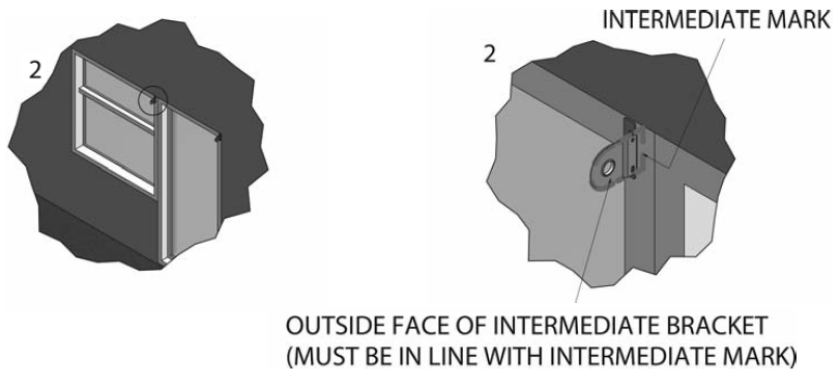

- 2) Place an intermediate bracket at the intermediate point, ensuring the outside face of the intermediate bracket lines up accordingly.



- 3) Fit control end bracket at the left hand side


Thank you for shopping at Covers.

For further information, please access our website at www.coverscanada.ca or contact our office.


Covers Canada Inc.
1695 Wonderland Rd. N.
London, Ontario N6G 4W3
(519)471-7818

Duo Link Rollers

INSTALLATION INSTRUCTIONS

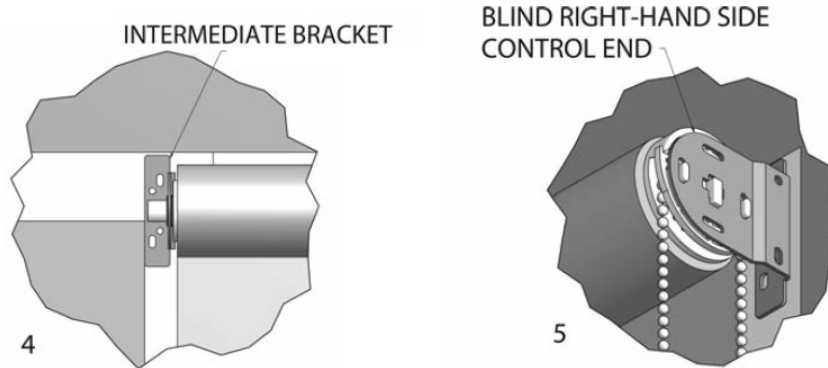

- 4) Right hand blind must be fitted first!
Insert the male idle end plug through the intermediate bracket
- 5) Locate, insert and secure control end

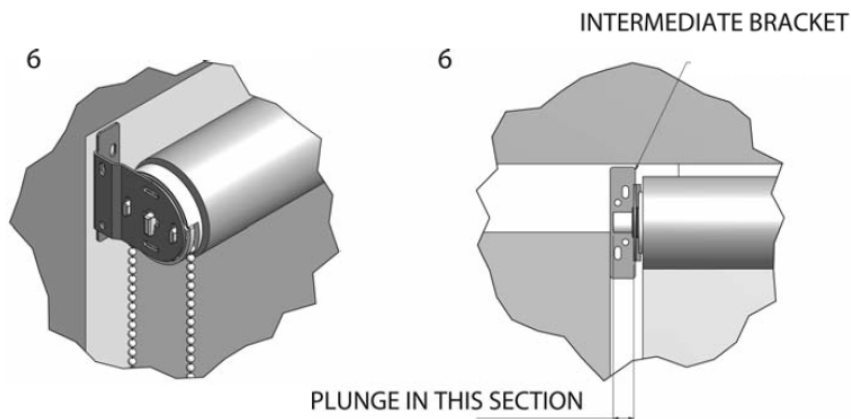

6) Left Hand Blind Diagrams

Thank you for shopping at Covers.

For further information, please access our website at www.coverscanada.ca or contact our office.

Covers Canada Inc.
1695 Wonderland Rd. N.
London, Ontario N6G 4W3
(519)471-7818