



## Fitting the Blinds

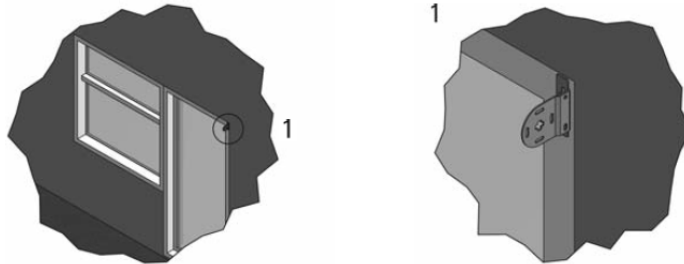

- 1) Starting at the right hand side, place and secure a control end bracket at the measurement taken

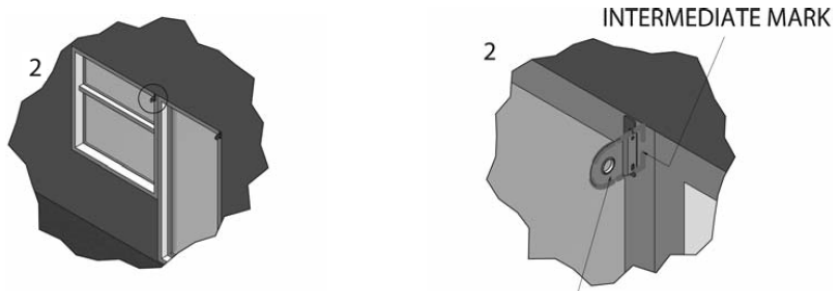

OUTSIDE FACE OF INTERMEDIATE BRACKET  
(MUST BE IN LINE WITH INTERMEDIATE MARK)

- 2) Place an intermediate bracket at the intermediate point, ensuring the outside face of the intermediate bracket lines up accordingly.



- 3) Fit control end bracket at the left hand side


*Thank you for shopping at Covers.*

For further information, please access our website at [www.coverscanada.ca](http://www.coverscanada.ca) or contact our office.


Covers Canada Inc.  
1695 Wonderland Rd. N.  
London, Ontario N6G 4W3  
(519)471-7818

## Duo Link Rollers

### INSTALLATION INSTRUCTIONS

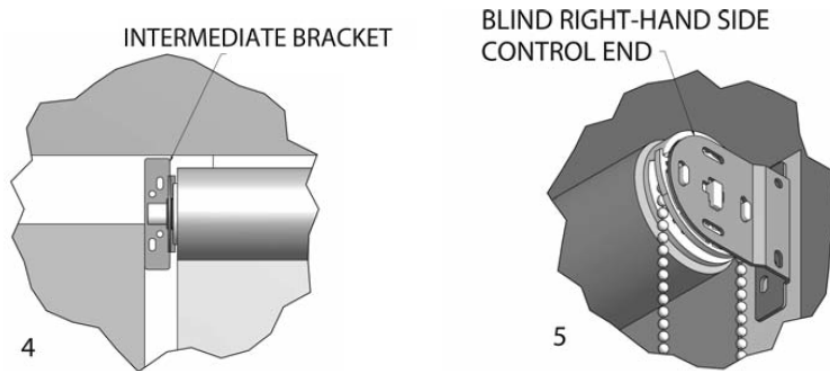

- 4) Right hand blind must be fitted first!  
Insert the male idle end plug through the intermediate bracket
- 5) Locate, insert and secure control end

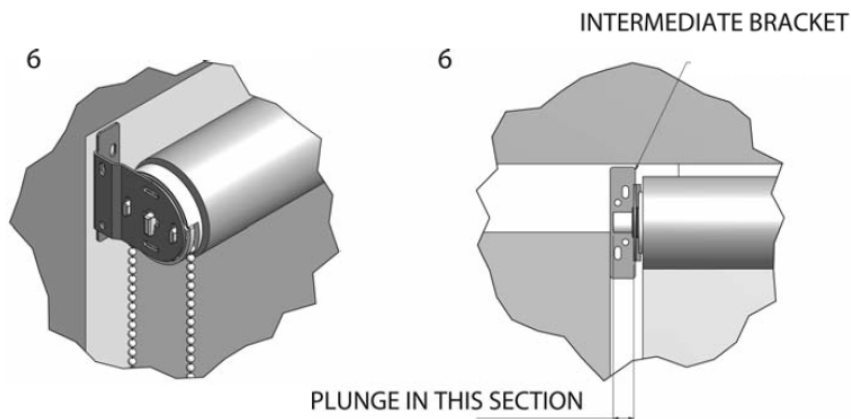

### 6) Left Hand Blind Diagrams

*Thank you for shopping at Covers.*

For further information, please access our website at [www.coverscanada.ca](http://www.coverscanada.ca) or contact our office.

Covers Canada Inc.  
1695 Wonderland Rd. N.  
London, Ontario N6G 4W3  
(519)471-7818